

Updating Static Well info

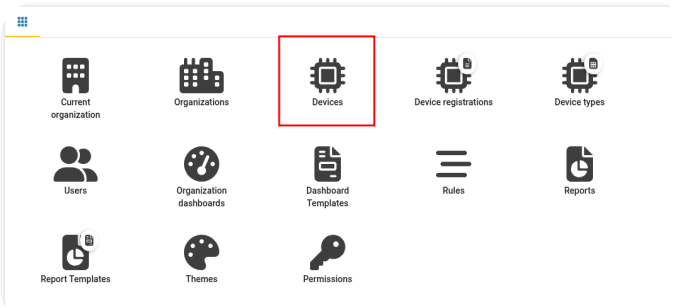


Step 1

Go to management at dashboard.watermappers.com/#/management and select "Devices"

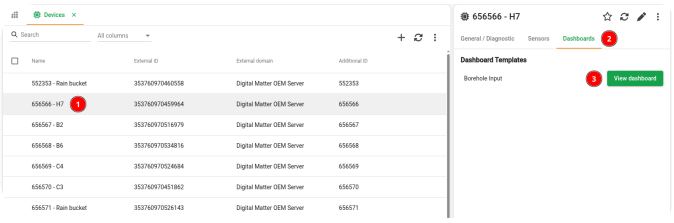


Step 2

Select a device, click "Dashboards" and click "View dashboard"

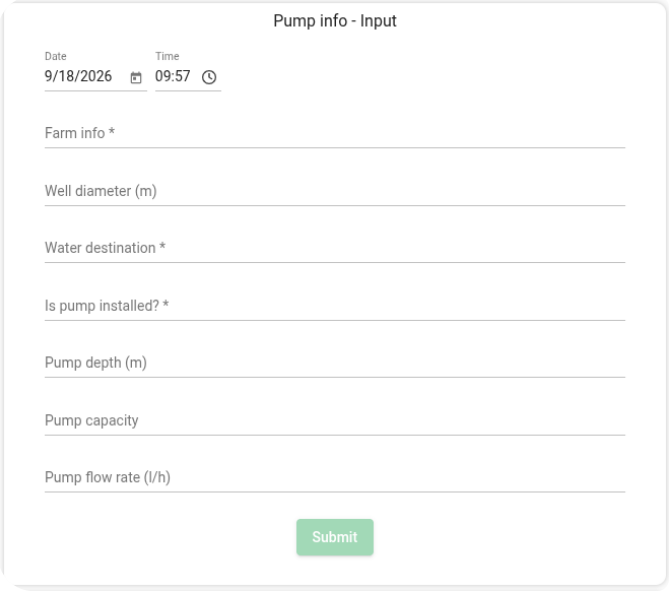

Step 3

You can use the input widgets to update pump info or register flow rate.

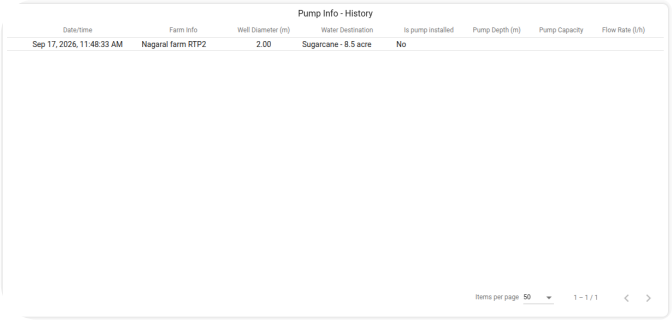

Step 4

Now the data can be viewed through the history table.

Created 2026-09-17 09:18:39 UTC by developer
Updated 2026-09-18 08:00:29 UTC by developer